

CD Boombox TDB-10

 


INSTRUCTION MANUAL

EN




AC Power

Plug the detachable AC cord into a standard AC outlet (100-240V~ 50/60Hz)

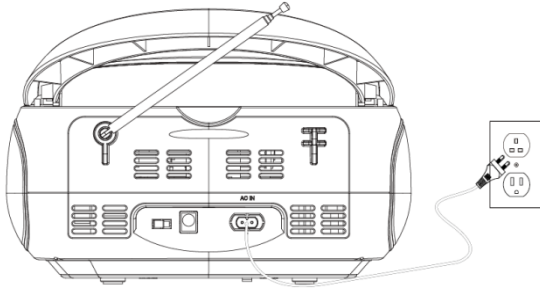

Battery Power

   Requires 4 C batteries, not included.

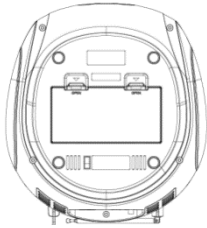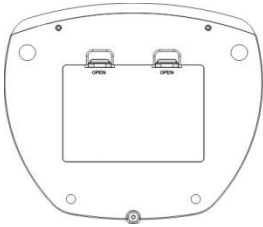




Listening to FM Radio

1. Adjust the function to FM mode by pressing the **FUN button**.
 - *Extend the FM antenna to improve FM radio reception.*
2. Short press the **PREV** or **NEXT** button to tune into the previous or next available station.
3. Press and hold the **PREV** or **NEXT** button to auto search the previous or next radio station.
4. Press and hold the **PLAY/PAUSE** button to automatically search and save radio stations automatically. Up to 30 radio stations can be saved.

DAB Radio

1. Adjust the function to DAB mode by pressing the **FUN button**.
2. Press and hold the **PLAY/PAUSE** button to automatically search and save DAB radio stations.
3. Short press the **PREV/NEXT** button to highlight a sub-station and press the **ENTER** button to select.
4. Short press the **INFO** button to display station details.

   Location of Controls

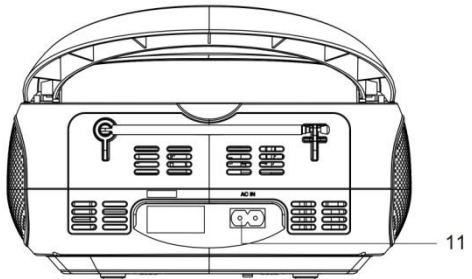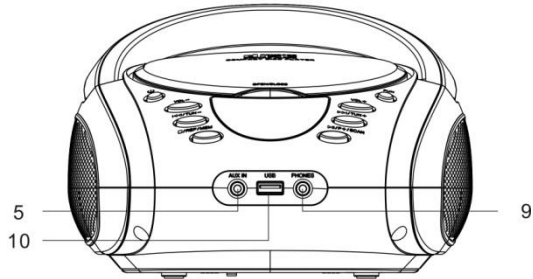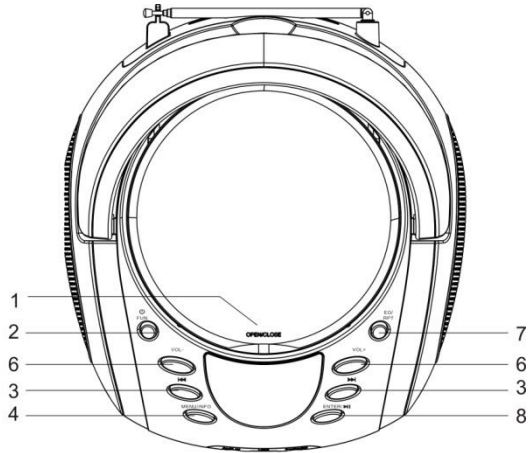

1. **OPEN/CLOSE**
2. **POWER/FUN**
 - Standby mode: Short press to turn the radio on; press and hold to turn the radio off. By default the radio turns on in DAB mode.
 - Operating mode: Short press to cycle through DAB/FM/CD/USB/AUX modes.
3. **PREV/NEXT**
 - In FM mode: Short press to scan up or down through the radio frequencies. Press and hold to scan up or down through FM frequencies.
 - CD/USB Mode: Short press to skip to previous or next title; press and hold for fast rewind and fast forward through the current title.
 - AUX Mode: This keys have no function.
4. **MENU/INFO**
 - Short press to display information; press and hold to display the menu.
5. **Aux-in**
 - Use the Aux input to connect an external audio source (MP3 player) to the unit.
6. **VOL+/VOL-**
 - Short press to increase or decrease the volume step by step; press and hold to increase or decrease the volume continuously. The max. volume level is 32.
7. **EQ/RPT**
 - Short press to cycle through EQ modes FLAT/CLASS/JAZZ/ROCK/POP.
 - USB Mode: Press and hold to cycle through the repeat functions REP-1/REP-DIR/REP-ALL/RANDOM.
 - CD Mode: Press and hold to cycle through the repeat functions REP-1 /REP-ALL/RANDOM.
8. **PLAY/PAUSE/ENTER**
 - FM mode: Press and hold for 2 seconds to automatically scan the FM frequencies.
 - CD/USB/BT mode: First short press to pause playback, then short press again to continue playback.
 - AUX mode: The key has no function.
9. **EARPHONES JACK**
10. **USB PORT**
 - Press the Mode button to select USB mode and connect a USB storage medium.
11. **AC Power Input**
 - Use the AC Power input to connect the unit to an AC power source.

Please notice - All products are subject to change without any notice. We take reservations for errors and omissions in the manual.

ALL RIGHTS RESERVED, COPYRIGHT DENVER ELECTRONICS A/S

DENVER®

www.denver-electronics.com



Electric and electronic equipment contains materials, components and substances that can be hazardous to your health and the environment, if the waste material (discarded electric and electronic equipment) is not handled correctly.

Electric and electronic equipment is marked with the crossed out trash can symbol, seen above. This symbol signifies that electric and electronic equipment should not be disposed of with other household waste, but should be disposed of separately.

All cities have established collection points, where electric and electronic equipment can either be submitted free of charge at recycling stations and other collection sites, or be collected from the households. Additional information is available at the technical department of your city.

Hereby, Inter Sales A/S declares that the radio equipment type TDB-10 is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address: www.denver-electronics.com and then click the search ICON on topline of website. Write model number: TDB-10. Now enter product page, and RED directive is found under downloads/other downloads.

Operating Frequency Range: FM:87.5-108MHz DAB: 174.928-239.200MHz

Max Output Power:8W

DENVER ELECTRONICS A/S

Omega 5A, Soeften

DK-8382 Hinnerup

Denmark

www.facebook.com/denverelectronics